

Ubiquiti AirRouter Setup Guide


1. Download the Zappie firmware file for the AirRouter if you haven't done so already and save it to your computer.
2. Plug the port labelled "<-->" into your modem or internet source, plug your computer into LAN port 1. Make sure your computers network settings are set to DHCP or Automatic.
3. Open your internet browser and navigate to <http://192.168.1.1/>, you'll be taken to the AirOS setup page.



4. The user is ubnt and the password is ubnt.
5. Once logged in, click "System" on the top menu.



6. Select the Zappie firmware file you saved to your computer and it should start uploading to the device.

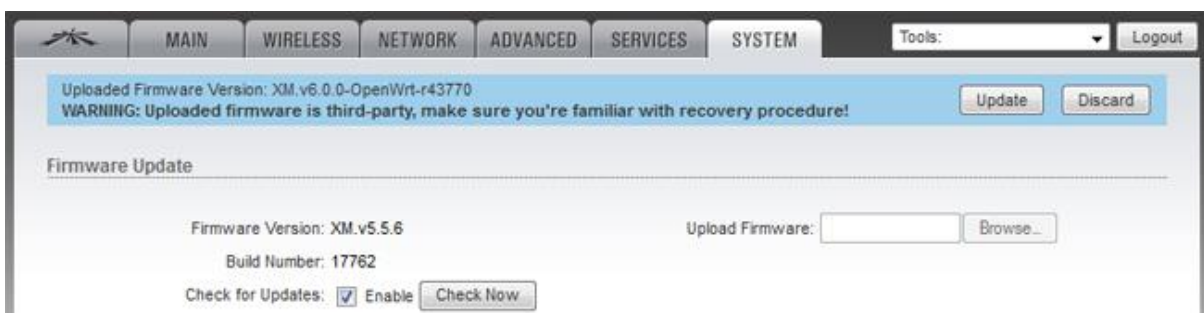

7. The device will prompt you about third party firmware, this is ok. Click the Update button to start the upgrade process.
8. Once the update is complete, your PC should receive an ip address in the range of 100.88.66.X. Try navigating to any non SSL domain, eg <http://www.google.com> and you should be redirected to the router sign up page. You can also look for “Zappie Hotspot” on your WiFi enabled device, this will also redirect to the router sign up page. Signing up is free and simply ties your router with a Zappie operators account.