

Ubiquiti PicoStation Setup Guide


1. Download the Zappie firmware file for the PicoStation M2HP if you haven't done so already and save it to your computer.
2. This guide assumes an understanding of PoE devices, if you are unsure please Google "Ubiquiti PoE setup".
3. Connect your computer to the device via the LAN port on the PoE Adapter. Make sure your computers network settings are set to Static with a fixed ip address of 192.168.1.2, and subnet of 255.255.255.0.
4. Open your internet browser and navigate to <http://192.168.1.20/>, you'll be taken to the AirOS setup page.



5. The username is ubnt and the password is ubnt.
6. Once logged in, click "System" on the top menu.



7. Select the Zappie firmware file you saved to your computer and it should start uploading to the device.

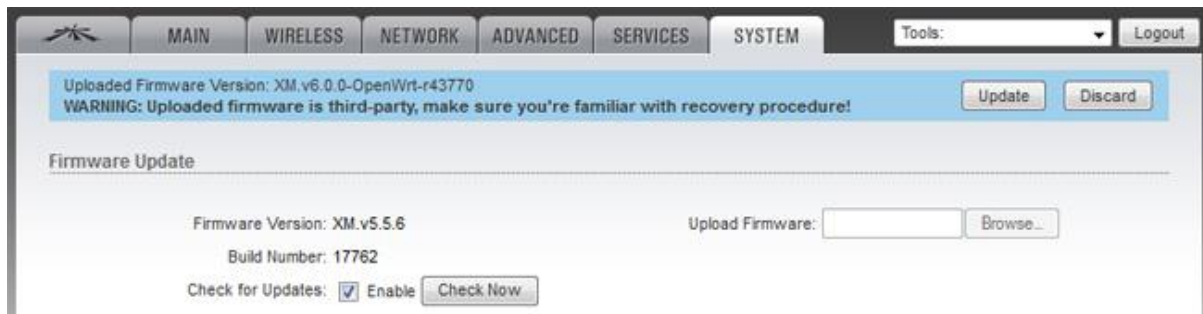

8. The device will prompt you about third party firmware, this is ok. Click the Update button to start the upgrade process.
9. Once the update is complete, plug the PoE adapter LAN port directly into your modem or internet source.
10. On your WiFi enabled device, look for the SSID/WiFi Network called “Zappie Hotspot” and join this network. Your device should be assigned an ip address in the range of 100.88.66.X.
11. Try navigating to any non SSL domain, eg <http://www.google.com> and you should be redirected to the router sign up page. You can also look for “Zappie Hotspot” on your WiFi enabled device, this will also redirect to the router sign up page. Signing up is free and simply ties your router with a Zappie operators account.